
PRECISION PLUMBING PRODUCTS

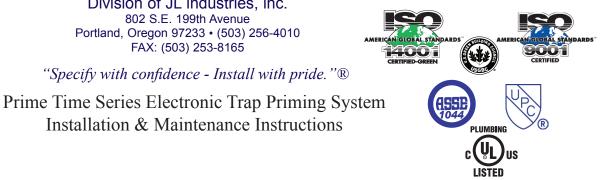

Division of JL industries, inc. 802 S.E. 199th Avenue Portland, Oregon 97233 • (503) 256-4010 FAX: (503) 253-8165

"Specify with confidence - Install with pride." ®

Installation & Maintenance Instructions



UL Listed UPC Listed 125 PSI Max.

Models PT-4 through 2130 & PTS-4 through 2130.

DESCRIPTION:

Prime Time is an electronically activated trap priming device. The system functions pre-selected sequence, delivering potable water to floor drains through a restricted manifold. (CAUTION: THIS UNIT MUST ALWAYS BE INSTALLED ABOVE ALL DRAINS IT IS INTENDED TO SERVE. ANY BACK PRESSURE WILL ENGAGE THE ATMOSPHERIC VACUUM BREAKER CAUSING WATER TO BE RELEASED INSIDE THE CONTROL CABINET.)

OPERATION:

A pre-set timer energizes a normally closed electronic solenoid valve. Potable water under system pressure enters the supply manifold and is distributed via compression fittings to the designated floor drains. The preset timer than de-energizes the solenoid allowing it to close until the next operational cycle.

INSTALLATION:

1) Anchor flush mount cabinet (PT Series) to studs with #14 wood screws. Remove cover and anchor surface mount cabinet (PTS Series) to wall using 1/4" fasteners designed for the surface in question. (CAUTION: ENSURE MANIFOLD AND BOX ARE INSTALLED LEVEL AND SQUARE.)

2) Remove cover screws from the composit timer control box containing the test switch and circuit breaker and make a three wire electrical connection. Black is "hot", white is "neutral" and green is "ground". (DANGER: THIS IS A HIGH VOLTAGE CONNECTION). All wiring must be in accordance with local and national electrical codes.

3) Connect a fresh water line to the 3/4" NPT inlet ball valve.

4) Connect appropriately sized (3/8" or 1/2" ID) copper supply lines to the manifold. (CAUTION: USE TWO WRENCHES WHEN MAKING COMPRESSION FITTING CONNECTIONS.)

5) Energize the system. The primer will fire for 6 seconds upon energizing. Test for leaks by holding down the manual override button marked "Test". Make certain all make up lines are free of debris by observing water flowing into the drains during testing. Should the circuit breaker trip, reset by pushing in. Recheck wiring and voltage.

Timing/Delivery Rate:

This unit is pre-set at the factory to deliver water to the traps for 6 seconds at an interval of once every 24 hours. THIS IS ADEQUATE TO SERVE 30 FLOOR DRAINS. DO NOT RE-SET IN THE FIELD. IF YOU WISH TO ALTER THE TIMING SEQUENCE, CALL THE FACTORY. DO NOT ATTEMPT TO SERVICE THE SOLENOID VALVE. CALL THE FACTORY FOR MANUFACTURERS INSTRUCTION. ALWAYS DE-ENERGIZE WHEN ENTERING THE GALVANIZED TIMER CONTROL BOX.

WATER HAMMER	TEMPERA	BAC-2-BAC	TRAP PRIMER VALVES	THERMOSTATIC
ARRESTORS	ANTI-SCALD VALVES	MANIFOLDS	AND MANIFOLDS	MIXING VALVES

INSTRUCTIONS PERTAINING TO A RISK OF FIRE ELECTRIC SHOCK, OR INJURY TO PERSONS *** IMPORTANT SAFETY INSTRUCTIONS *** *** SAVE THESE INSTRUCTIONS ***

WARNING - When using electric appliances, basic precautions should always be followed, including the following:

- a) Read all of the instructions before using the appliance.
- b) Do not contact moving parts.
- c) Only use attachments recommended or sold by the manufacturer
- d) Do not use outdoors.

Do not operate any appliance after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.

- e) For a permanently connected appliance De-energize when the appliance
- is not in use and before servicing or cleaning.
- f) For a grounded appliance Connect to a properly grounded service only. See grounding instructions.

GROUNDING INSTRUCTIONS:

This appliance must be connected to the grounded metal stud inside the cabinet.

PRIME-TIME SURFACE MOUNT Cabinet Size: 12" x 12" x 4"

PRIME-TIME FLUSH MOUNT Cabinet Size: Inside Dimensions MODELS: PT-4 - PT-12 14"W x 16"L x 3 3/8"D MODEL: PT-1320 20 1/2"W x 16 1/2"L x 3 3/8"D MODEL: PT-2130 30 1/2"W x 20 1/2"L x 3 3/8"D



WATER HAMMER ARRESTORS ANTI-SCALD VALVES

TEMPERA

BAC-2-BAC MANIFOLDS TRAP PRIMER VALVES AND MANIFOLDS

THERMOSTATIC MIXING VALVES II-PT-01 Rev. 10/13