www.pppinc.net



## **INSTALLATION P1-500 & P2-500 TRAP PRIMER VALVES**


- 1.) Flush line prior to installation.
- 2.) Use ribbon pipe seal tape ONLY.
- 3.) Install valve plumb using caution to not over tighten. Tightening to more than 55ft.lbs. can damage valve and void the warranty. Do not wrench on hex.
- 4.) Effective operating range 20 to 80 PSIG (138 to 552 kpa). Min. discharge rate for P1-500, is 71.25 ml/m at 20 PSIG. Min. discharge rate for P2-500 is 56.25 ml/m at 20 PSIG.
- 5.) Do not subject Trap Primer Valve to pressure in excess of 125 PSI.
- Failure to follow these instructions will make the product warranty null and void.

Precision Plumbing Products of Portland, Oregon (USA) warrants our manufactured products to be free from defects and workmanship under normal use and service. The sole and exclusive remedy for our manufactured products that do not conform to this limited and express warranty and our sole obligation under this limited and express warranty is to replace the defective part or product during the three year period after original installation. This warranty excludes any parts or products that are modified or improperly installed or installed where PH levels, chemical conditions or electrolysis prematurely degrade the product. We specifically disclaim any warranties or responsibility for defects due to quality, material, dimensional tolerances or quality control of any fitting or other third party supplied parts or components. EXCLUSIONS OF ALL OTHER WARRAN-TIES INCLUDING IMPLIED WARRANTIES: All other warranties, including the implied warranties of MERCHANTABILITY and fitness for a particular purpose, are **EXCLUDED** from this transaction and shall not apply to goods sold by us. The above warranties are in lieu of all other warranties and representations, express or implied, and all other obligations or liabilities on our part. We shall not be liable for consequential damages, loss of profit, interruption of business or any other special, incidental, or punitive damages suffered or sustained by Customer. Any part or products being returned under this warranty must have prior authorization by us. Any part or product received by us without a return of goods authorization will be returned to the shipper. All returned merchandise must be prepaid by shipper. Our personnel, including salespeople, as well as independent distributors and sales agents may have made oral statements about our products. Those statements are not warranties by us and should not be relied on by the buyer/customer/user. If you use this product you are agreeing to this warranty contract between us. This writing constitutes the final expression of the parties and is the complete and exclusive statement of that contract for warranges.

## CAUTION

- A) To adjust: Turn adjusting screw counter clockwise until a steady flow is produced.
- B) Turn adjusting screw clockwise until dripping just stops. Primer is now set to line pressure.
- C) Cycle primer at least (5) times to ensure proper activity.
- D) The Trap Primer must be installed on a cold fresh water line of 1 1/2" dia. or less.
- E) Must be installed near a fixture that creates a minimum of 10 PSIG pressure drop.
- F) Do not install on water heater line due to insufficient pressure drop.
- G) Do not subject Trap Primer Valve to pressure in excess of 125 psi.
- All drain supply lines must be clear to assure proper discharge to trap. Failure to do so could result in water discharge through air gap port.

Use debris loop to prevent foreign matter from entering directly into the primer.

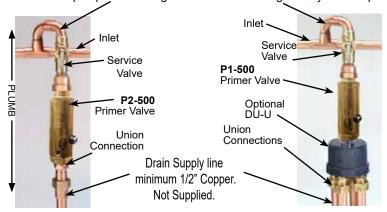

The Priming valve must have min. elevation of 12" (305mm) above the finished floor. Allow 1 foot of elevation for every 20 feet of distance run for floor drain make-up line.

## PPP

## **Precision Plumbing Products**

Division of JL Industries, Inc. 802 SE 199th Ave Portland, Oregon 97233

T (503) 256-4010 F (503) 253-8165

www.pppinc.net

LEAD FREE NSF/ANSI - 372 - 2016











MI-TPV-02 Rev 09/21